


miniatures.com
discount dollhouses & more

#92020 The Corner Place

Available exclusively from Hobby Builders Supply/miniatures.com

Step-by-step assembly instructions

Copyright HBS/miniatures.com 2020

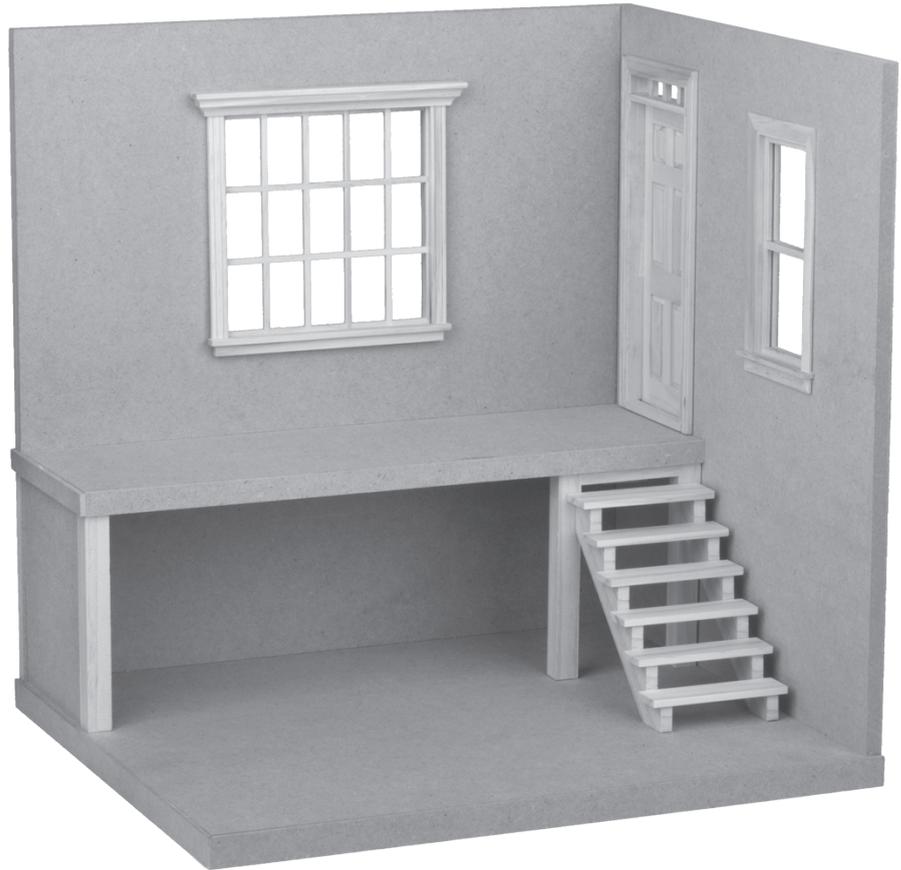

MDF PARTS:

- (1) Left wall (large window opening)
- (1) Right wall (door opening)
- (1) Floor
- (1) Platform
- (2) Floor edge support/trim
- (1) End panel/platform support
- (2) Platform edge trim

WHITEWOOD PARTS:

- (1) Preassembled step unit
- (3) Platform support legs
- (1) Step support brace
- (1) Door
- (1) Large window
- (1) Small window
- Trim for door and windows

SUPPLIES NEEDED:

- Masking tape
- White glue (such as #1249 Weldbond)
- Ruler
- Pencil

GENERAL INSTRUCTIONS

- Read all the instructions before you begin.
- Choose a work surface that is clean, dry and protected from glue spills.
- Make sure all parts are in the kit.
- Do a dry fit, using masking tape to hold parts in place, to make sure everything fits together correctly before permanent assembly.

The Corner Place is smooth MDF with whitewood components and trim.

***Tip:** Plan the finishes for the interior and exterior at the dry-fit stage, before final/permanent assembly. It is easier to finish the panels as flat surfaces. Disassemble and finish as desired, then reassemble using glue.*

As you plan your project, keep in mind that the steps and all platform supports may be used in any location; the platform edge trim is provided to create a more substantial appearance but is not required; and that the door opening is a standard size if you prefer a different style.

STRUCTURE ASSEMBLY:

Step 1. Place left wall on work surface with grooved side up and floor groove near you. Place right wall at right, fitting into rabbet and matching floor groove. Fit floor into grooves on both walls, square up edges and tape securely.

Step 2. Fit floor edge trim/support pieces to outside edges of floor and join the mitered corner. Tape securely. Set assembly upright.

Step 3. Using a gluing jig or other method to assure a square join, glue the step support brace between two of the platform support legs, flush at the top and forming an upside-down U assembly. (This assembly is necessary to support the steps and will not need to be taken apart so may be glued right away.)

Step 4. Fit the platform into its groove and square to the right wall. Use the remaining platform support leg and/or the end panel/platform support to keep the platform level. Tape securely.

Step 5. When the glued step support assembly is dry, fit it in place at the front edge of the platform and rest the step unit against the posts so that it is flush against the floor and the posts.