

## #14506 What-Not Shelf

Available exclusively at miniatures.com

Step-by-step assembly instructions

Copyright miniatures.com 2023

### MDF PARTS:

Back  
Trim (21)  
Shelf (3)  
Cap  
Foot

### SUPPLIES NEEDED:

Masking tape  
White glue (such as #1249 Weldbond)

### GENERAL INSTRUCTIONS


- Identify and inspect all parts.
- Read the directions completely before beginning the project.
- If possible, have a dedicated work area so that you are not unpacking, repacking, and moving the project from place to place.
- Choose a work surface that is level, clean, dry, and protected from spills.
- Do a dry fit, using masking tape to hold parts in place, to make sure everything fits together correctly before assembling permanently.



## Assembly Instructions

**Tip:** Plan the finishes at the dry-fit stage, before final/permanent assembly. It is easier to finish as flat surfaces. Disassemble and finish as desired, then reassemble using glue.

- 1 Place the **Back** flat on the work surface.
- 2 Glue **Trim** around the door and all three windows.
- 3 Glue a **Shelf** into each of the three slots on the **Back**.
- 4 Glue **Trim** to the **Back**. It is flush with the outside edge and goes between the shelves and up around the gable.

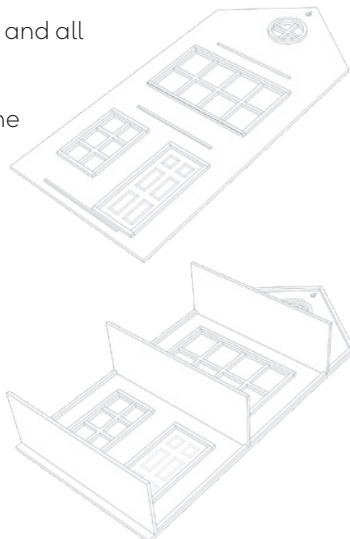

- 5 Glue the **Cap** in place. It is flush with the peak of the gable and covers the key hole.
- 6 Glue the **Foot** to the front of the bottom **Shelf**. Its exact placement is by preference.
- 7 Let dry.
- 8 Hang the shelf from the key hole that is behind the **Cap**.

Assembly of the What-Not Shelf is now complete.

